



Innovation. Application. Dedication.

# INSTRUCTIONS

## ISC85X Intelligent Controller Hockey Instructions

HOCKEY - LACROSSE		
HOME SCORE	VISITOR SCORE	2:00
HOME PENALTY	VISITOR PENALTY	5:00
HOME SHOTS	VISITOR SHOTS	10:00
+ 1		20:00

ISC85X	
GAME TIME	INT MODE
TIME UP / DOWN	PERIOD
PLAY TIMER SET	SHIFT
PLAY TIMER RESET	

### 5. To set PENALTIES:

- **Press HOME or GUEST PENALTY.**
- Depending on where the cursor is – Player Number, Penalty time, Minutes & Seconds – enter the desired value on the numeric keypad and **Press ENTER.**

### NOTE:

- Penalties 1 & 2 for both teams will show and run on the scoreboard.
- Penalties 3 & 4 are delayed penalties and will appear once either Penalties 1 or 2 are complete.
- To cancel Penalty 1 or 2 because of an opposing team goal or for some other reason, just select it by using the applicable button (**HOME PENALTY** or **GUEST PENALTY**) and clear out the Player Number and Penalty Time. Any pre-set 'delayed penalties' will shift into place once playing time resumes.

### 1. To START/STOP the clock:

- Flip switch to RUN or STOP (rocker switch on the right side of the unit).

### 2. HORN:

- Sounds automatically at end of period/intermission.
- To activate manually, press Horn button (on the right side of the unit). Horn will continue to sound as long as the button is pressed.

### 3. To set TIME (NOTE: Switch must be in STOP position.):

- **Press GAME TIME.**
- If time is expired, the last time entered will automatically be shown.
- To set a Different Time:
  - Enter minutes on the numeric keypad. **Press ENTER.**
  - Enter seconds on the numeric keypad. **Press ENTER.**
  - Enter hundredths of seconds on the numeric keypad. **Press ENTER.**

### 4. To set INT MODE timer: (Intermission Time)

- Switch must be in STOP position.
- **Press INT MODE.**
- The time last entered will display automatically.
- To set a Different Time:
  - Enter minutes on the numeric keypad. **Press ENTER.**
  - Enter seconds on the numeric keypad. **Press ENTER.**
- While in this mode, the only way to exit is to press the **INT MODE** button again.

### 6. Pre-Set INCREMENT buttons:

- For TIME, and BREAK MODE, use the pre-set increment buttons to increase the minutes by preset values of 2, 5, 10, or 20 minutes.
- Move the cursor to minutes.
- **Press TIME/INT MODE**, then the desired time increment button – 2:00, 5:00, 10:00, or 20:00. (The time will increment by that value - not get set to that value.)



www.oes-scoreboards.com

4056 Blakie Road, London, Ontario, CANADA, N6L 1P7 Tel: 519-652-5833 Fax: 519-652-3795

Product specifications and related information subject to change without notice. Printed in Canada.







Innovation. Application. Dedication.

# INSTRUCTIONS

7. To set **PERIOD**:

- Press **PERIOD**.
- Enter value on the numeric keypad. Press **ENTER**.
- Will auto-increment when setting time at end of period.

8. To set **SCORES**:

- Press **HOME OR GUEST SCORE**.
- Enter score on numeric keypad. Press **ENTER**.

**NOTE:** To Increment **SCORES** or **PERIOD**, press desired function button, then Press **+1**.

9. To set **SHOTS ON GOAL (IF ENABLED)**:

- Press **HOME SHOTS** or **GUEST SHOTS**.
- Enter value on numeric keypad. Press **ENTER**.

**NOTE:** With the game time running, increment **SHOTS** by pressing appropriate teams **SHOTS** button.

10. To set **PLAY TIMER (IF ENABLED)**:

- Ensure Start/Stop switch is in **STOP** position.
- Press **PLAY TIMER SET**.
- Enter "shot clock" length on the numeric keypad. Press **ENTER**.

**NOTE:** If **PLAY TIMER** is enabled, but not required – set play timer to 0, to disable it.

11. To **RE-SET PLAY TIMER (IF ENABLED)**:

- Press **PLAY TIMER RESET**.
- if equipped, Press external button

12. To **CLEAR** any value:

- Press any function button to move the flashing cursor over a desired value. Then Press **CLEAR**.

13. To set **SHIFT TIMER (IF ENABLED)**:

**NOTE:** The **SHIFT TIMER** counts down from the set amount. When the **SHIFT TIMER** is expired a one second horn will sound, then the **SHIFT TIMER** will reset and start counting down again.

- Press **SHIFT**.
- Enter the shift time settings in minutes using the numeric keypad. Press **ENTER**.
- To edit the current running shift time Press **SHIFT**. Then **SHIFT** again. Enter the minutes using the numeric keypad. Press **ENTER**. Enter the seconds using the numeric keypad. Press **ENTER**.

**NOTE:** On power up, the shift time will be 0:00, which leaves it in an inactive mode which means no horns will sound.

14. To set **CLOCK DIRECTION**

- Press the **TIMER UP/DOWN** button.
- This will toggle between **UP** and **DOWN**. If **UP** is selected, press **ENTER**.
- Then, enter time limit using the numeric keypad, and press **ENTER**, again.



www.oes-scoreboards.com

4056 Blakie Road, London, Ontario, CANADA, N6L 1P7 Tel: 519-652-5833 Fax: 519-652-3795

Product specifications and related information subject to change without notice. Printed in Canada. 

